

**microcontroller supported by ICprog-AVR2.0 / ICprog-AVR2.0 KANDA
Stand: 2007/05/01**

ATmega:

ATmega48, ATmega88, ATmega168, ATmega8, ATmega16, ATmega32,
ATmega64, ATmega103, ATmega128, AT90CAN128, ATmega1280,
ATmega1281, ATmega640, ATmega161, ATmega162, ATmega163,
ATmega169, ATmega164, ATmega324, ATmega644, ATmega329,
ATmega3290, ATmega649, ATmega6490, ATmega8515, ATmega8535

ATtiny:

ATtiny10, ATtiny12, ATtiny13, ATtiny15, ATtiny26, ATtiny2313, ATtiny25,
ATtiny45, ATtiny85, ATtiny24, ATtiny44, ATtiny84

AT90S/PWM:

AT90S1200, AT90S2313, AT90S2323, AT90S2333, AT90S2343,
AT90S4414, AT90S4433, AT90S4434, AT90S8515, AT90S8534,
AT90S8535, AT90S8544