
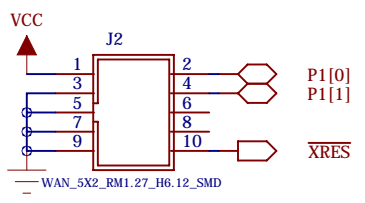


No Boost config (default)	configuration using the Boost Converter
R3,R5 short	R3,R5 open
R4 open	R4 short
	make additional connections as described in datasheet -> boost converter section

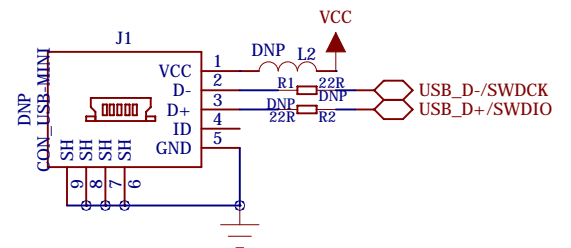

**In-Circuit GmbH**  
 Boltenhagener Str. 124  
 D-01109 Dresden  
 (C) Copyright by In-Circuit GmbH

PROJECT TITLE:  
**610000187: ICT PSOC-Evalboard**

BOARD NO <b>625000188A</b>	SHEET TITLE <b>PSOC</b>	SIZE: <b>A3</b>	REV: <b>A</b>
DRAWN: <b>Karsten Stork</b>	DATED: <b>10.05.2011</b>	RELEASED: <b>-</b>	DATED:
CHECKED: <b>-</b>	DATED:	LAST SAVED <b>09.02.2017</b>	SHEET: <b>1 OF 1</b>